


ROZDZIELNICA WENTYLACJI

F1-3x301C0,5
 F2;F6-S303C10
 F3-3xS303C0,5
 F4;F5-S301C2
 F7-F301C4
 F8;F9-S01C6
 K1;K2;K3;K7;K8;K11-3NO-24 A 230 V
 K4;K10-2N -24 A 230 V
 K6-DZF
 K4;K10-2NO-24 A 230 V
 K12;K13 -1NZ $t_{op} = 2 s$
 K14 1NO 24 A 230 V
 K15 1NO 24 A 230 V
 K16-3NO+1NZ-24A 230 V
 K17 PSC 517
 H1 -LK-713

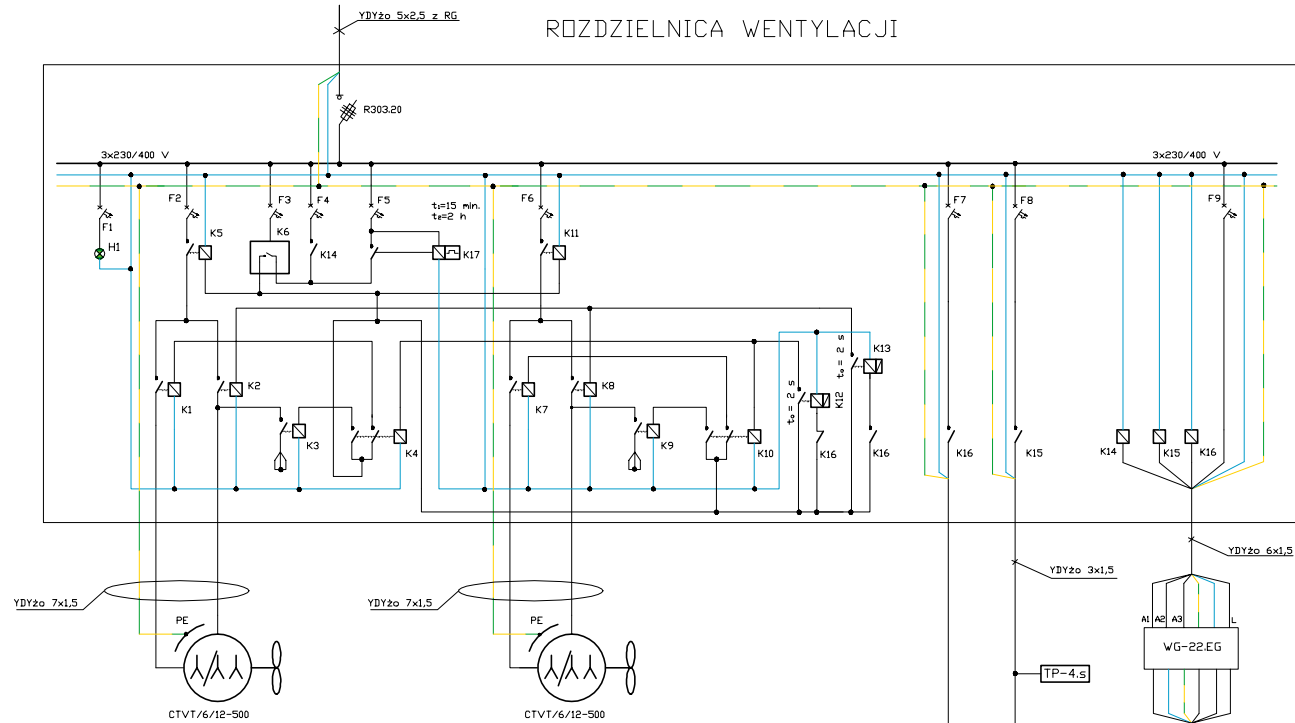

SCHEMAT POŁĄCZEŃ UZWOJEŃ SILNIKA

